


ESSE
—
**GARDEN
STOVE**
— WITH PIZZA OVEN —


Instruction Manual

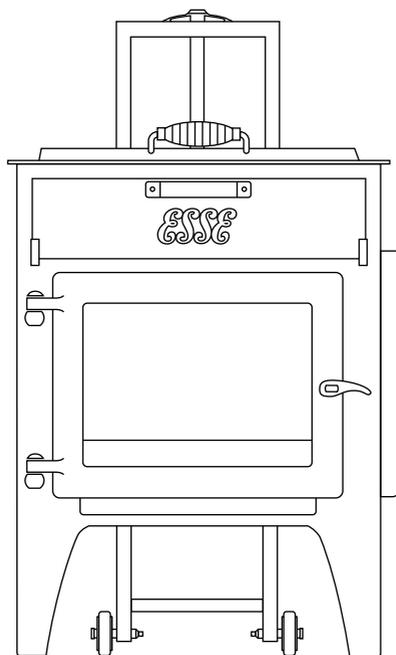

CONTENTS



Do not attempt to move the stove with the lid up when the flue sections are in position, or when the fire is lit and in use, as the stove will become very hot.

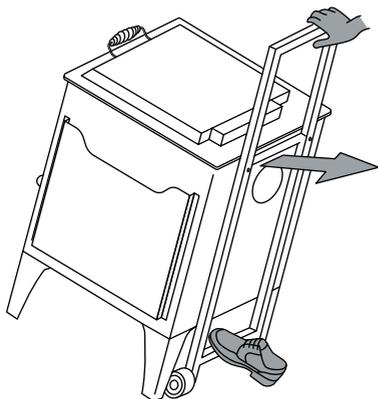


Your ESSE Garden Stove comes supplied with the wheel trolley in position. To move the appliance, place one foot on the base of the trolley, and gently rock backwards, onto the two wheels. You can now carefully pull your ESSE Garden Stove into position.

Always ensure that the appliance is positioned on a non-combustible surface. Care should also be given to ensure that there is no combustible materials above the appliance, such as trees.

PREPARATION FOR USE



To fasten the halo to the frame use the screw and washer provided. Tighten with the 10mm spanner.

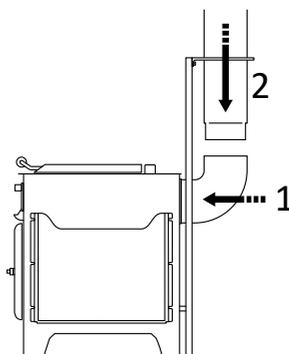

To assemble the flue – insert elbow flue pipe to the rear of the stove and fit the 1000mm length above.




Do not cover the appliance, or place any combustible item on any of its surfaces, when in use.

LIGHTING YOUR ESSE GARDEN STOVE




Do not use white spirit or petrol for lighting or re-lighting.


When your ESSE Garden Stove is first lit, it may give off an odour. This is quite normal, as the paint cures when the stove is heated for the first time.

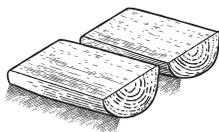

Place a split log of dry, seasoned wood in the base of the stove. Do not use damp or chemically treated wood.

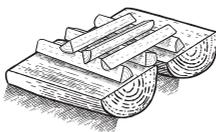

Lay on top six pieces of kindling in a grid as shown, avoiding pieces thicker than two inches.

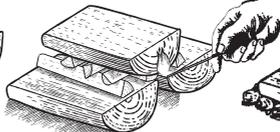

Rest another piece of split log on top of the kindling. Set three fire starters amongst the kindling and light with a safety match.



The rate of burning and amount of heat can be varied using the rear airway control.



Ensure children and pets are kept away from the appliance during use.

AFTER USE





Your ESSE Garden Stove will be hot during and after use. Ensure the appliance is completely cool before attempting to clean or move it.

After your ESSE Garden Stove has been used for the first time, we recommend coating it with a fine layer of flax oil, inside and out. This will help prolong the life of your appliance.

Your ESSE Garden Stove is designed to be kept undercover and dry when not in use.

Ash Management To access the ash pan under the grate, lift the fireguard and, using the tool, pull the ash pan towards you.

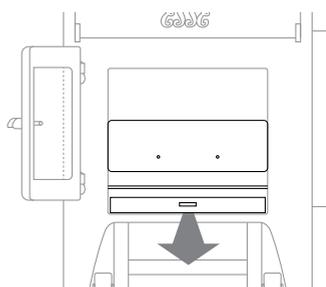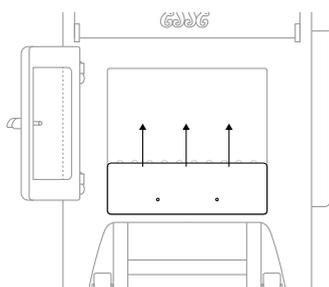

Cleaning

The exterior cast iron and sheet steel parts should be cleaned with a soft brush or lint-free cloth. Should areas of the appliance need re-painting, high temperature aerosol paints are available from your retailer.

Storage

Before moving your ESSE Garden Stove ensure the top is down before carefully pulling your ESSE Garden Stove to the undercover area.

Warranty

Your ESSE Garden Stove comes with a one year warranty against defects in materials and workmanship. Does not cover incorrect use or application, wear and tear or damage to the glass window. The appliance is not to be used as an incinerator. For further information visit esse.com.

Serial Number

.....



ESSE Engineering Ltd.

Long Ing Lane, Barnoldswick
Lancashire, BB18 6BJ

Tel. 01282 813 235

Website and On-line Store: www.esse.com